



30w
PD FAST CHARGER



Package Contents
PD30W charger
User Manual

website: www.maxtelo.com



Thank you for purchasing the PD45W charger.
Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Model: JT-TP74C1U1
Power: 30W
Input: AC100-240V 50/60Hz 0.6A Max
Output: Type-C: 5V/3A 9V/3A 12V/2.5A 15V/2A 20V/1.5A
PPS: 3.3V-9V/3A 3.3V-11V/2.75A(30W Max)
Output USB-A: 5V/3A 9V/2A 12V/1.5A(18W Max)
Output Type-C+USB-A: 6V/3A

Getting Started

1. Plug the charger into a wall outlet
2. Connect a charging cable (not included) to your device charging port.
3. Connect the other end to an output port on the charger
4. Unplug your devices when fully charged

Use environment

1. Operating environment temperature: 0 °C to 35 °C in non-tropical areas below 2000 meters above sea level
2. The device is only suitable for indoor use
3. Storage temperature: -20 °C to 40 °C

Note:

Please read all instructions and warnings before using this product. Improper use will cause damage to the product.1. Do not store this product under high temperature, strong light and strong magnetic environment, do not place it in other harsh environments such as fire source to avoid heat,combustion or electrical shock.2. When over-voltage, over-current, or over-temperature occurs during charging, the charger will automatically stop charging to avoid damage. When returning to the normal state, charging will continue.3. Do not disassemble, repair or modify this device by yourself.4. Do not touch the power adapter with wet hands or immerse it in water or other liquids.5. Do not use the power adapter for products higher than the output range of this product to avoid electrical shock, burning or damage to the device.